

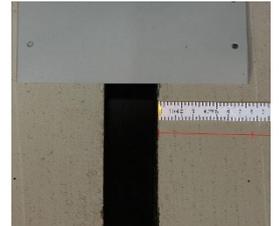
# Application manual for KÖSTER Joint Tape 20 / 30 using KÖSTER KB-Pox Adhesive

**1.**

Mask both sides of the joint with tape.

**2.**

Embed KÖSTER Joint Tape 20 min. 4 cm (Joint Tape 30 min. 5 cm) into the adhesive on each side. The adhesive is applied 2 cm farther onto the substrate.

**3.**

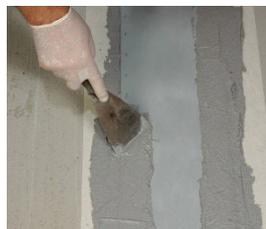
Mix the A and B components of KÖSTER KB-Pox Adhesive as stated in the technical guideline to a homogenous grey color. Apply KÖSTER KB-Pox Adhesive on both sides approx. 2 mm thick.

**4.**

Press the KÖSTER Joint Tape onto fresh adhesive layer.

**5.**

Immediately apply a second layer of adhesive on top of the tape and overlapping the masking tape on the sides. The center of the tape stays free of adhesive.

**6.**

Remove the masking tape on both sides before the adhesive cures in order to achieve a clean finish.

**7.**

Leave the finished job to cure for approx. 24 hours.

**8.**

After KÖSTER KB-Pox Adhesive has cured for 24 hours, the area waterproofing can be applied overlapping onto the epoxy layer.



Issued: 21.04.2023